

The first time you start your ManTooth RSA app either tap on the gear to access General Settings or tap "Start Session" to begin a new session



device measurement units, set the auto

off time, and more. See the full manual

for complete details. Tap in the upper left

corner to return to the app home screen.

*Sat alayation	
Elevation	0
Use GPS to Fi	nd Elevation
*Set refrigerant	
Refrigerant	R-22 3
Set location details	
Location	None Specified
Set equipment details	
Equipment	None Specified
Conti	
Conti	nue
m the app home sci guide you through	reen "Start Sessi the steps to get
m the app home sc guide you through nTooth PT Module begin a new sessio	reen "Start Sessi the steps to get reading values. (n you can set yo
m the app home sc guide you through nTooth PT Module begin a new session vation for pressure rigerant for the sess	reen "Start Sessi the steps to get reading values. C on you can set yo corrections, set yo ion, and set the

Note you must have a refrigerant

selected to continue.

Devices	Nor	ne Specified 🔰
Before zero pressure trar	bing a pressur nsducer is not system!	e, be sure the attached to the
Pressure Reading	Js	
	Continue	
	Exit	

tap on the words "None Specified".



Assign Devices and Zero

Assign detected devices

Devices	YJPT-1415-0003 >	
Before zeroing a pressure, be sure the pressure transducer is not attached to the system!		
Pressure Readings		
0.0 psig YJPT-1415-0003	3 - 1 Zero	
0.0 psig YJPT-1415-0003	3 - 2 Zero	
	Continue	
	Exit	

Once you have connected to your ManTooth device(s) you can zero the pressures by tapping "Zero".

Note always zero the pressure transducers before attaching to a service port to ensure the most accurate readings.

💁 Attach Devices
Pressure Readings
0.0 psig
YJPT-1415-0003 - 1
0.0 psig YJPT-1415-0003 - 2
Attach the pressure transducers and temperature probes to the system, then select Begin Session .
Begin Session

After you have zeroed the pressures you can attach the pressure transducers to the system and you are ready to begin the session.

			D 00
			K-22
Pressure	High I	ressure	Low F
UNASSIGNED		UNASSIGNED	
/g max	inin av	g max	min av
Saturation	Liquid	aturation	Vapor S
UNASSIGNED		UNASSIGNED	
h Temp	High	Temp	Low
UNASSIGNED		UNASSIGNED	
cooling	Sub	erheat	Sun
out		Orle	
Calc	Target	Calc	Target

To change the refrigerant, assign the high or low pressures, assign the high or low temperatures, or set the superheat or subcooling simply tap on the box containing the value you want to change.

🚭 Low Pressure	
0.0 psig YJPT-1415-0003 - 1 0.0 psig YJPT-1415-0003 - 2	
To select a high or low pressu temperature simply tap on th corresponding to the pressur transducer or temperature pr wish to assign.	ire or ie value e robe you
To change the target superhe subcooling values just fill in t necessary information and th will calculate the rest for you	eat or he ne app
🚰 Target Superheat	Ľ
Outdoor Dry Bulb Temp	
Indoor Wet Bulb Temp	

🔤 Readings	6
R-22	
Low Process	High Pressure
psig	psig
-0.4 -0.4 -0.4	-0.4 -0.4 -0.4
thin avg max	initi urg illax
Vapor Saturation	Liquid Saturation
-41.5	-41.5
°F	°F
Low Temp	High Temp
75.2	75.5
۴F	۴F
Superheat	Subcooling
Target Calc	Target Calc
7.0 116.6	15.0 -116.9 "F"
Exit Session	Clear Readings

To save the current values in your session to Service History that can be accessed in the future tap on the screenshot button and you will have the option to save the readings and even send it via email. Your service history can be found on the home screen of the ManTooth app.