

# YJACK® Series - Bluetooth® Sensing Technology

67060, 67061, 67062, 67063, 67070, 67071, 40887


## Quick Start Guide



### 1. Power on YJACK® devices and place in desired locations throughout jobsite.




Press and hold the power button to power the YJACK® devices on. Release the power button when the status indicator LED illuminates.

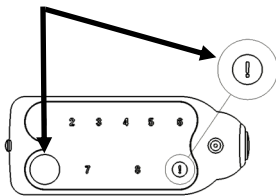

YJACK PATH® numeric LEDs 1-8 will illuminate to indicate the number of YJACK® Devices, TITANMAX® and P51-870 TITAN® Digital Manifold within range.


Remove black vinyl cap covering sensing element. Form wand to desired shape and place within ventilation system or wherever psychrometric data is desired.

Depress clamp handle to open clamp jaws and attach clamp to pipe surface where temperature measurements are desired.

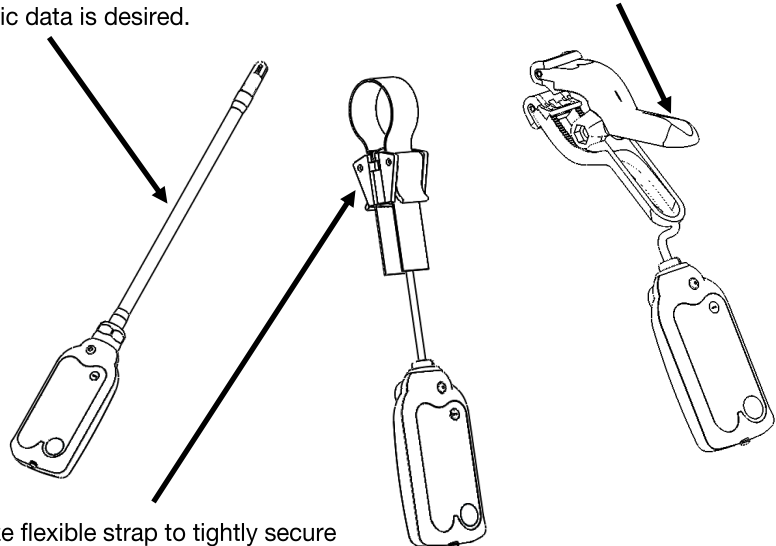


Utilize flexible strap to tightly secure strap clamp to pipe surface where temperature measurements are desired.

### 2. Launch the YJACK VIEW® app and select the devices you would like to display within the app. There is no Bluetooth® pairing required.

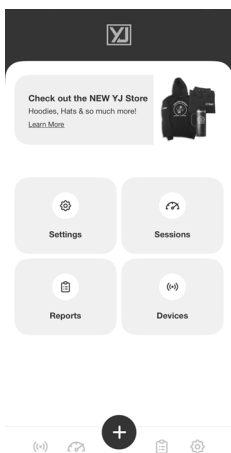


Utilize the navigation menu to quickly navigate between available devices, sessions, reports, and settings.

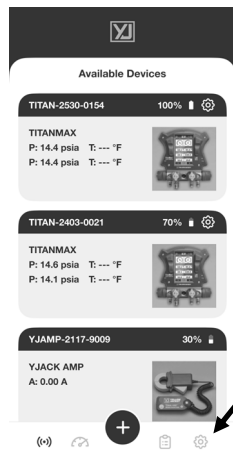

The Available Devices screen allows you to view available Bluetooth® devices.

Utilize the app settings menu to easily change general settings, select refrigerants, set elevation, and create data logs.

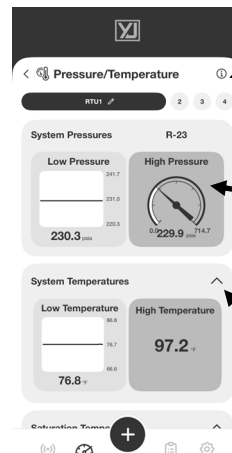

Tap Info icon to get detailed information about Session instructions and features.

Tap on each data view to select device and view type.

Tap Data Headers to expand or collapse data sets.

Pressure/Temperature Session


3.

Power on your TITANMAX® or P51-870 TITAN® Digital Manifold and select from any available YJACK® devices to be displayed on screen (requires P51-870 TITAN® firmware update v2.0 or later). There is no Bluetooth® pairing required.

Utilize Settings menu to easily change general settings, select refrigerants, set elevation and create data logs.




Home Screen allows you to quickly navigate to different session types.

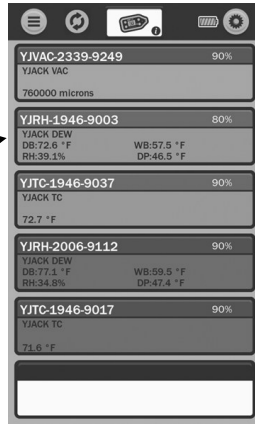

Available Devices screen allows you to view and select available Bluetooth® devices

(White—available; Blue—selected Low Side; Red—selected High Side; Green—selected Vac; Grey—selected but not connected).

Tap Info icon to get detailed information about Session instructions and features.

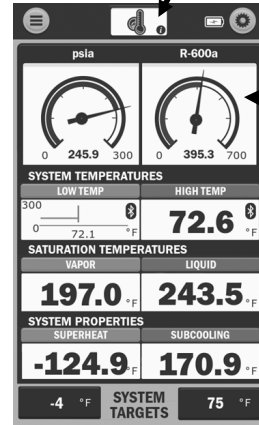


Tap each data view to select desired view type.

Pressure/Temperature Session

4.

When finished, power devices off and store in a dry, temperature-controlled area.

 Storing your YJACK® device in extreme cold or heat can severely limit the battery life. Excessive exposure to high humidity may cause damage over time.



To power off a YJACK® device, press and hold the power button until the status indicator LED is no longer illuminated.

Always replace the vinyl cap on your YJACK DEW® to prevent moisture ingress and potential damage to the sensing element.



For additional information, please see the manual located on YJACK® product pages at [www.yellowjacket.com](http://www.yellowjacket.com). Visit the app store or follow the QR codes below to download the YJACK VIEW® app.

Firmware Updates



New features and innovative tools may be added to our firmware. To check to see if you have the most up-to-date firmware for the YELLOW JACKET® TITANMAX® and P51-870 TITAN® Digital Manifold and the YJACK® Devices, please go to:

[www.yellowjacket.com/firmware-updates](http://www.yellowjacket.com/firmware-updates)

