



TITANMAX™ DIGITAL MANIFOLD

Quick Start Guide

For additional information regarding the TITANMAX™ and the YJACK VIEW® app operation, please see the User Manual at www.yellowjacket.com or scan QR code.



Also available on measureQuick® app.



1.

Power the unit on by pressing the power button once.

Select the desired mode of operation from the menu.



2.



Plug the low side temperature probe into T1 on the lower left side of the device.

Plug the high side temperature probe into T2 on the lower right side of the device.

3.




MAIN MENU

Available Devices Shows YJACK® tools to connect


- Session Type
 - Pressure/Temperature Digital manifold readings
 - Evacuation Vacuum system testing
 - Leak Test Pressure system testing
 - Psychrometric Sys Efficiency System efficiency calculations
 - Information Information

4.

The main menu can be accessed by tapping the menu icon on the upper left corner in any session.

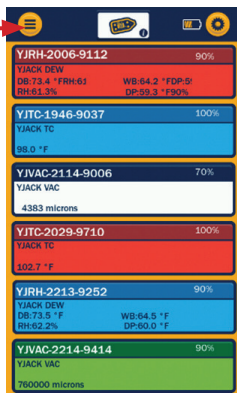


5.

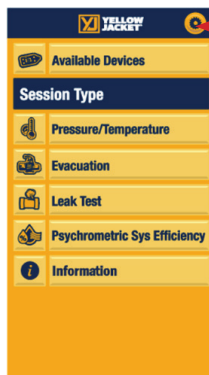

Settings for: Refrigerant, units, zero pressure sensors, device settings and logs can be accessed by tapping the settings icon in the upper right corner.

6. Pressure/Temperature session displays system pressure, temperature, system superheat and subcooling.

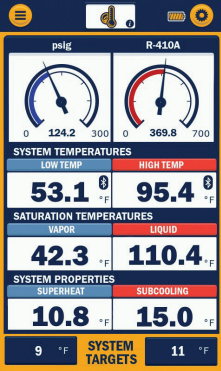


TYPE

- GAUGE
- GRAPH
- NUMBER

CANCEL SAVE

Tapping the center of either gauge or graph lets you change to gauge, graph or number.


7.

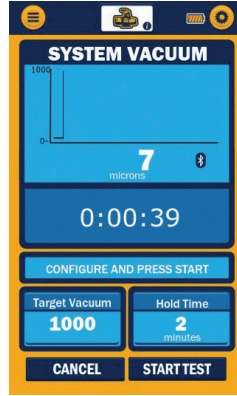

Evacuation


session displays vacuum readings as measured by a YJ auxiliary vacuum sensor. Plug the vacuum sensor into the top right port on the side of the device or connect YJACK VAC® device.

8.

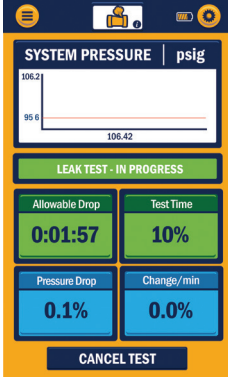

Leak Test session displays pressure change in the system during a standing pressure test. Allowable Drop is percentage the current system pressure is allowed to drop before the test is deemed a failure. Set the allowable drop percentage.


9.

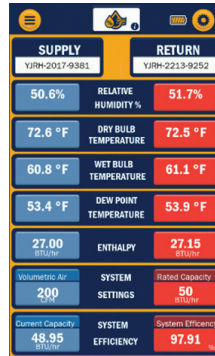

Psychrometric

session displays system data based on YJACK DEW® information. Data is manually entered for actual air flow (by tapping the Volumetric Air box), rated capacity. Current capacity is calculated and compared to give a system efficiency.


10.

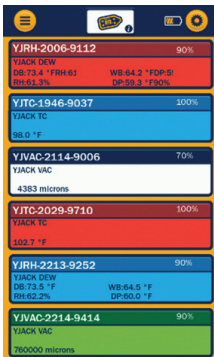

Available Devices displays Available devices to provide data for the sessions the TITANMAX™ connects with the YJACK DEW®, YJACK VAC® and YJACK® Temperature devices. Data is also logged from these devices in the data logging session.

11.

Set low temp and supply devices, high temp and return devices come up once low temp and supply is determined.

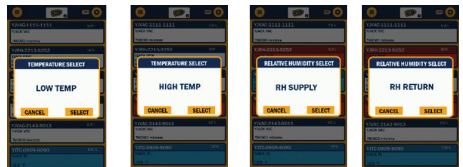

12.

SETTINGS

CHANGE REFRIGERANT → Select refrigerant

PSIG Microns F → Change units

ZERO PRESSURE SENSORS → Zero built in sensors

DEVICE SETTINGS → Adjust screen settings

LOGS → Data Logs

Languages → Languages

13.

Select up to 3 for easy activation

Page to find desired refrigerant

White Dot indicates active

Click dot to activate

Add to FAVORITES list

14.

MEASUREMENT UNITS

Pressure

bar kPa

psia MPa

psig kg/cm²

Vacuum

Micron mbar

torr mmHg

kPa Pa

Temperature

°F °C

Energy

BTU/hr Watts

Airflow

CFM m³/hr

CANCEL SAVE

15.

Screen brightness

Slide to adjust brightness

Screen back light time without screen interaction

Press '+' or '-' to adjust timer

Time device shuts off after last interaction

Press '+' or '-' to adjust time

Select 'NONE' to disable Auto Off function. Press and Hold power button for 3 seconds to turn off your TITANMAX™.

16.

Time between recorded data

Session to record upon entry (data is only recorded while in the session)

Clear log file on this device to create more memory space

17. Bluetooth®

Navigate directly to the **YJACK VIEW®** app to establish the Bluetooth® connection with your TITANMAX™ manifold.



YJACK VIEW® App
Apple/App Store

YJACK VIEW® App
Android™/Google Play

Firmware
Updates



iPhone iPad



Also available on **measureQuick®** app.



TITANMAX™

DIGITAL MANIFOLD

Quick Start Guide

For additional information regarding the TITANMAX™ and the YJACK VIEW® app operation, please see the User Manual at www.yellowjacket.com or scan QR code.



Also available on **measureQuick®** app.



Ritchie Engineering Co., Inc. / YELLOW JACKET®
www.yellowjacket.com
1-800-769-8370 | 952-943-1300
custserv@yellowjacket.com

    
www.yellowjacket.com