


YJACK® Series - Bluetooth® Sensing Technology
67065 YJACK PRESS® Wireless Pressure Gauge
Quick Start Guide




1. Power on YJACK PRESS® device and connect to system service port.


Press and hold the power button to power the YJACK PRESS® on. Release the power button when the status indicator LED illuminates.

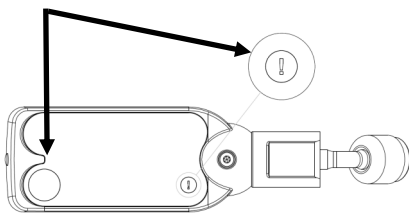

Note the Bluetooth® ID on the back of the device, this ID will be used to assign the device readings in the YJACK VIEW® app.

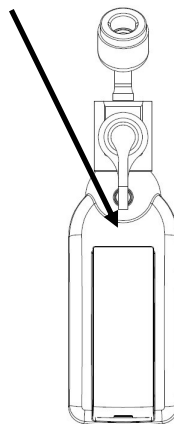

Connect the 1/4" quick coupler to the system service port*.

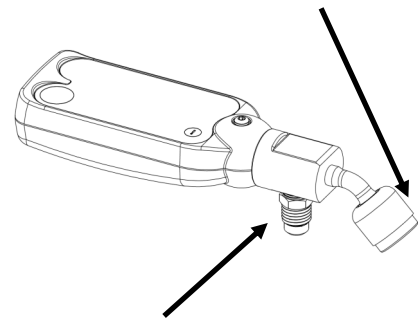

The 1/4" charging port on the back of the device allows for adjustment of system charge while continuing to monitor the system pressure.

*The 19121 (straight) or 19221 (90 degree) adapter fittings can be used for connection to 5/16" service ports.

2. Launch the YJACK VIEW® app and select the desired settings and session type. There is no Bluetooth® pairing required.




Home Screen allows you to quickly navigate to different session types.



Available Devices screen allows you to view available Bluetooth® devices.

Utilize the app settings menu to easily change general settings, select refrigerants, set elevation, and create data logs.


Tap the gear icon to access the device connection commands.

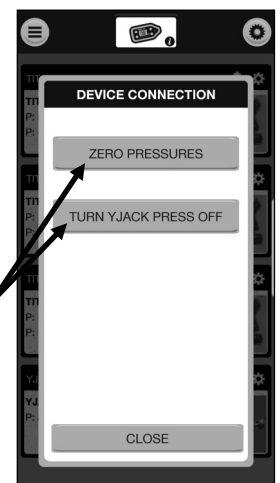

From the Device Connection screen, the YJACK PRESS® can be zeroed or powered down remotely.

3

View the system pressure readings in the Pressure/Temperature or Leak Test sessions.

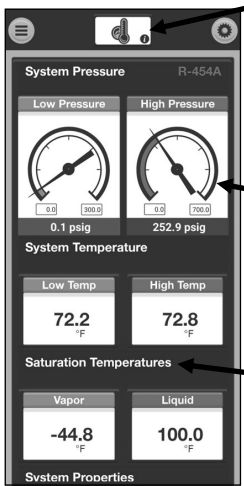

Tap Info icon to get detailed information about Session instructions and features.

Tap on each data view to select device to be displayed and desired view type.


Tap Data Headers to expand or collapse data sets.

Pressure/Temperature Session




Tap the readings to enter Leak Test settings.

Leak Test Session

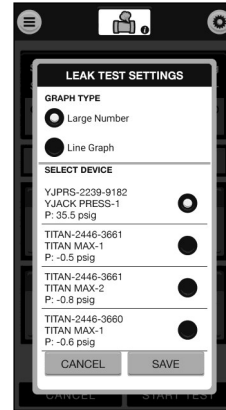

Select graph type and device.

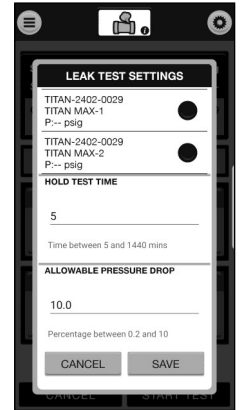


Scroll down and enter test time and pressure drop percentage.


4

When finished, power devices off and store in a dry, temperature-controlled area.

*Storing the YJACK PRESS® device in extreme cold or heat can severely limit the battery life. Excessive exposure to high humidity may cause damage over time.

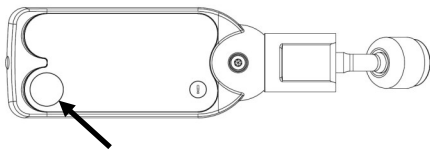

To power off the YJACK PRESS®, press and hold the power button until the status indicator LED is no longer illuminated.

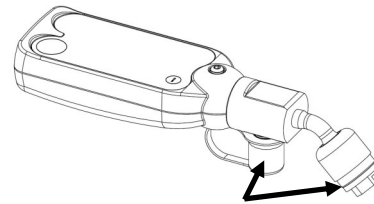

Replace the caps on the YJACK PRESS® fittings to prevent moisture ingress and potential damage to the sensor.



For additional information, please see the manual located on YJACK® product pages at www.yellowjacket.com. Visit the app store or follow the QR codes below to download the YJACK VIEW® app.

Firmware Updates



New features and innovative tools may be added to our firmware. To check to see if you have the most up-to-date firmware for the YELLOW JACKET® TITANMAX™ and P51-870 TITAN® Digital Manifold and the YJACK PATH® Range Extender, please go to:

www.yellowjacket.com/firmware-updates

