



TOOL IS IDEAL FOR

- Cutting off the flare in extremely tight service situations.
- Cutting off the flare immediately behind the shoulder.
- Cutting off 1/4, 5/16 and 3/8" flares.

Choose correct arbor for tubing and install.

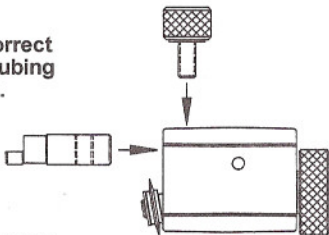

Put cutter arbor into flare end.

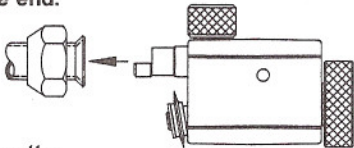

Tighten cutter wheel and rotate.

